

HIGH PRESSURE WATER BLASTER



SPECIAL INSTRUCTIONS:

- 1. Ultra-high pressure cleaning should be carried out in an area isolated from other workers, or steps taken to prevent exposure of persons to the cleaning process.
- 2. Persons should not operate ultra-high pressure water blasters unless they have been instructed in the hazards and the means of safe use of the equipment.
- 3. All persons using high pressure water blasters are to use personal protective equipment appropriate for the task and the equipment used.

Sequence	Identified hazards	Key processes to be followed	Precautions / PPE required
1. General precautions	Personal injury	Follow manufacturer's instructions when operating high pressure water cleaners.	Wear eye, face, body and hand protection,
	Falls of persons	Keep work areas clean – remove grease and other matter from wet floors.	and 'non-slip' footwear.
		Provide safe access when working on steep, mossy or slippery surfaces.	Provide edge protection at heights.
	Electric shock	Inspect appliance lead, extension lead and plugs for damage before use.	Check inspection tag for currency
		Use only extension leads approved for outdoor/industrial use.	Do not use domestic equipment.
	Hazardous materials	DO NOT use high pressure cleaner on hazardous materials (e.g., asbestos).	Inspect materials before water blasting.
	Over-exertion / strains	Obtain assistance when moving or lifting machine – observe safe handling rules.	Train personnel in correct lifting.
2. Pre-start checks	Pre-start inspection	Ensure that all safety devices are operating and not modified or bypassed.	Do not tamper with safety features.
	_	Check assembly of machine, and inspect hoses for damage before every use.	Do not use faulty or damaged cleaner.
		Use only recommended high pressure hoses, couplings and other spare parts.	Ensure compatible parts only are used.
		Check fuel and oil levels, fill fuel tank before starting and when engine is cool.	Do not refuel while engine is running.
	Water supply	Ensure that all supply hoses and delivery system are fitted correctly.	Use approved hose fittings only
	requirements	Connect to clean town water supply – DO NOT operate from tank, pond or pool.	Ensure adequate water volume from tap.
	_	Incoming water supply must deliver double the flow of the machine.	Check supply volume at machine.
3. Risks to other	Injury to other persons	Prevent other persons entering areas where high pressure water blaster is used.	Prevent access into working area.
persons		Never direct a jet of high pressure water towards other persons or own body.	Do not use to clean clothing or footwear.
		Do not direct high pressure water jet at animals or live electrical equipment.	Exercise care when using cleaner.
		Provide other workers who must be in work area with appropriate protection.	Wear eye and body protection.
4. Risks to property and	Injury or harm to persons	Provide containment screens around work where adjoining areas may be affected by	Provide safe access for public past work area
public	or property	water spray containing chemicals or other harmful or damaging substances.	 use opposite footpath if necessary.
		Avoid working in windy conditions when others may be affected by spray drift.	Check conditions before starting.
		Programme work to minimise exposure of public and other persons to risk.	
		Contain contaminated runoff to prevent pollution of the environment.	Provide spill control mats and spill socs to
		Do not allow contaminated water to enter drains, sewers or waterways.	prevent entry of contaminant into drains.
5. Start up procedures	Damage to machine	Ensure that water supply is turned on before starting machine – do not 'run dry'.	Do not run dry for more than 15 seconds.
		Position machine in location away from traffic and on a firm level surface.	Prevent unintended movement in use.
		Ensure that water supply hose, extension leads, and delivery hoses are located to	Keep extension leads off ground.
		prevent them being damaged or causing a trip hazard to persons on site.	
		Ensure that machine is secure from movement while operating.	
		Always follow operating instruction when starting machine (including warm up).	Check system for leaks before using.

This document is valid until 30 May 2024 (for 12 months) unless otherwise notified.

This information is intended to provide a general guide to the subject matter and must not be viewed as a definitive guide to the law or legal advice. Specialist advice should be sought regarding this subject matter in your jurisdiction and specific circumstances.

High Pressure Water Blaster was generated by ASSA Group Pty Ltd on 30 May 2023 for use only by **Eaglehawk**

Uncontrolled when printed or downloaded



HIGH PRESSURE WATER BLASTER



Sequence	Identified hazards	Key processes to be followed	Precautions / PPE required
6. Operation	Foreign matter in eyes	Avoid water splash containing cleaning agent and foreign matter when cleaning.	Wear goggles and/or face shield.
	Skin irritation	Wear waterproof clothing to prevent overspray and splash back resulting in	Wear heavy duty wet weather clothing.
		operator's clothing becoming wet with contaminated water when cleaning.	Wear PVC or similar gloves.
		Protect hands from detergent and high pressure water jet or spray when cleaning.	Avoid recoil when using cleaner.
	Slips and falls	Keep balanced posture, sound footing and hold trigger gun and spray lance firmly.	Ensure good footing at all times.
		Use only recommended detergents and cleaners to prevent premature wear.	
	Damage to cleaner	Turn machine off if break longer than recommended will be made between uses.	Refer to operator's manual for allowed
		Release pressure from system using trigger gun after job complete or work ended.	idle times for individual machines.
7. Transport and	Damage to cleaner	Flush system with clean water before stopping machine after using detergent.	Always flush system with clean water
storage		Allow machine to run for 1 minute without load to cool down before stopping.	after using cleaning agents.
		Follow stop instructions for individual machines to prevent engine damage.	Refer to operator's manual for allowed
		Turn fuel off, and drain tank is machine is to be stored for long periods.	idle times for individual machines.
		Turn off water supply, and release pressure from system after engine is stopped.	Do not run for more than 15 seconds
		Release pressure by pulling trigger, and lock trigger after all pressure is released,	without water supply.
		and before disassembling hose and cleaning assemblies.	Check filter in supply hose connection,
		Wind high pressure hose completely on to drum before moving or storing.	and rinse and clean regularly.
		Obtain assistance when handling heavy or awkward loads – wheel machine where	Check tyre pressure and inflate if low.
		possible to avoid lifting.	
		Completely drain all water from cleaner when storing in sub-zero conditions.	Store machine in an upright position.
8. Maintenance	Moving parts and parts	Turn off cleaner and unplug from power supply before any maintenance work.	Do not work on machine if power or water
	under pressure	Detach cleaner from water supply and drain system prior to work.	supply is turned on.
		Remove sieve from water connection using flat-nose pliers and wash under tap.	Do not carry out unauthorised repairs.
		Remove dirt and debris from high pressure nozzle using suitable needle and rinse	Use only compatible replacement parts.
		through with water from the exit side. Check water flow quantity after cleaning.	Do not tamper with unloader valve setting.

PRECAUTIONS:

The following precautions are to be observed in areas where these procedures are carried out.









